



### A = 6" Manual Distributor 60°

No. Of Outlets	B	C	D	E	F	H
4	45 1/2	38 1/2	31	37	8 1/2	12
6	45 1/2	38 1/2	31	37	8 1/2	12
8	45 1/2	38 1/2	31	37	8 1/2	12
10	54 1/2	48 1/2	41	45 1/2	9	21
12	54 1/2	48 1/2	41	45 1/2	9	21
14	60 1/2	55 1/2	48	51 1/2	9	28
16	67 1/2	63 1/2	56	58 1/2	9	36
18	74 1/2	71 1/2	64	65 1/2	9	44

### A = 8" Manual Distributor 60°

No. Of Outlets	B	C	D	E	F	H
4	45 1/2	40	31	37	8 1/2	12
6	45 1/2	40	31	37	8 1/2	12
8	54 1/2	50	41	45 1/2	9	21
10	54 1/2	50	41	45 1/2	9	21
12	60 1/2	57	48	51 1/2	9	28
14	67 1/2	65	56	58 1/2	9	36
16	74 1/2	73	64	65 1/2	9	44
18	79 1/2	79	70	70 1/2	9	50

### A = 10" Manual Distributor 60°

No. Of Outlets	B	C	D	E	F	H
4	45 1/2	42	31	37	8 1/2	12
6	45 1/2	42	31	37	8 1/2	12
8	54 1/2	52	41	45 1/2	9	21
10	60 1/2	59	48	51 1/2	9	28
12	67 1/2	67	56	58 1/2	9	36
14	74 1/2	75	64	65 1/2	9	44
16	82 1/2	84	73	73 1/4	9 1/4	52
18	89.5	92	81	80.125	9.375	60

### A = 12" Manual Distributor 60°

No. Of Outlets	B	C	D	E	F	H
4	45 1/2	44 1/4	31	37	8 1/2	12
6	54 1/2	54 1/4	41	45 1/2	9	21
8	60 1/2	61 1/4	48	51 1/2	9	28
10	67 1/2	69 1/4	56	58 1/2	9	36
12	74 1/2	77 1/4	64	65 1/2	9	44
14	82 1/2	86 1/4	73	73 1/4	9 1/4	52
16	91 1/2	96 1/4	83	82	9 1/2	62
18	108	115.25	102	96.75	11.25	72